Installation instruction

ARAT Navigation mount

For: VW Fox

Part No: NS1356

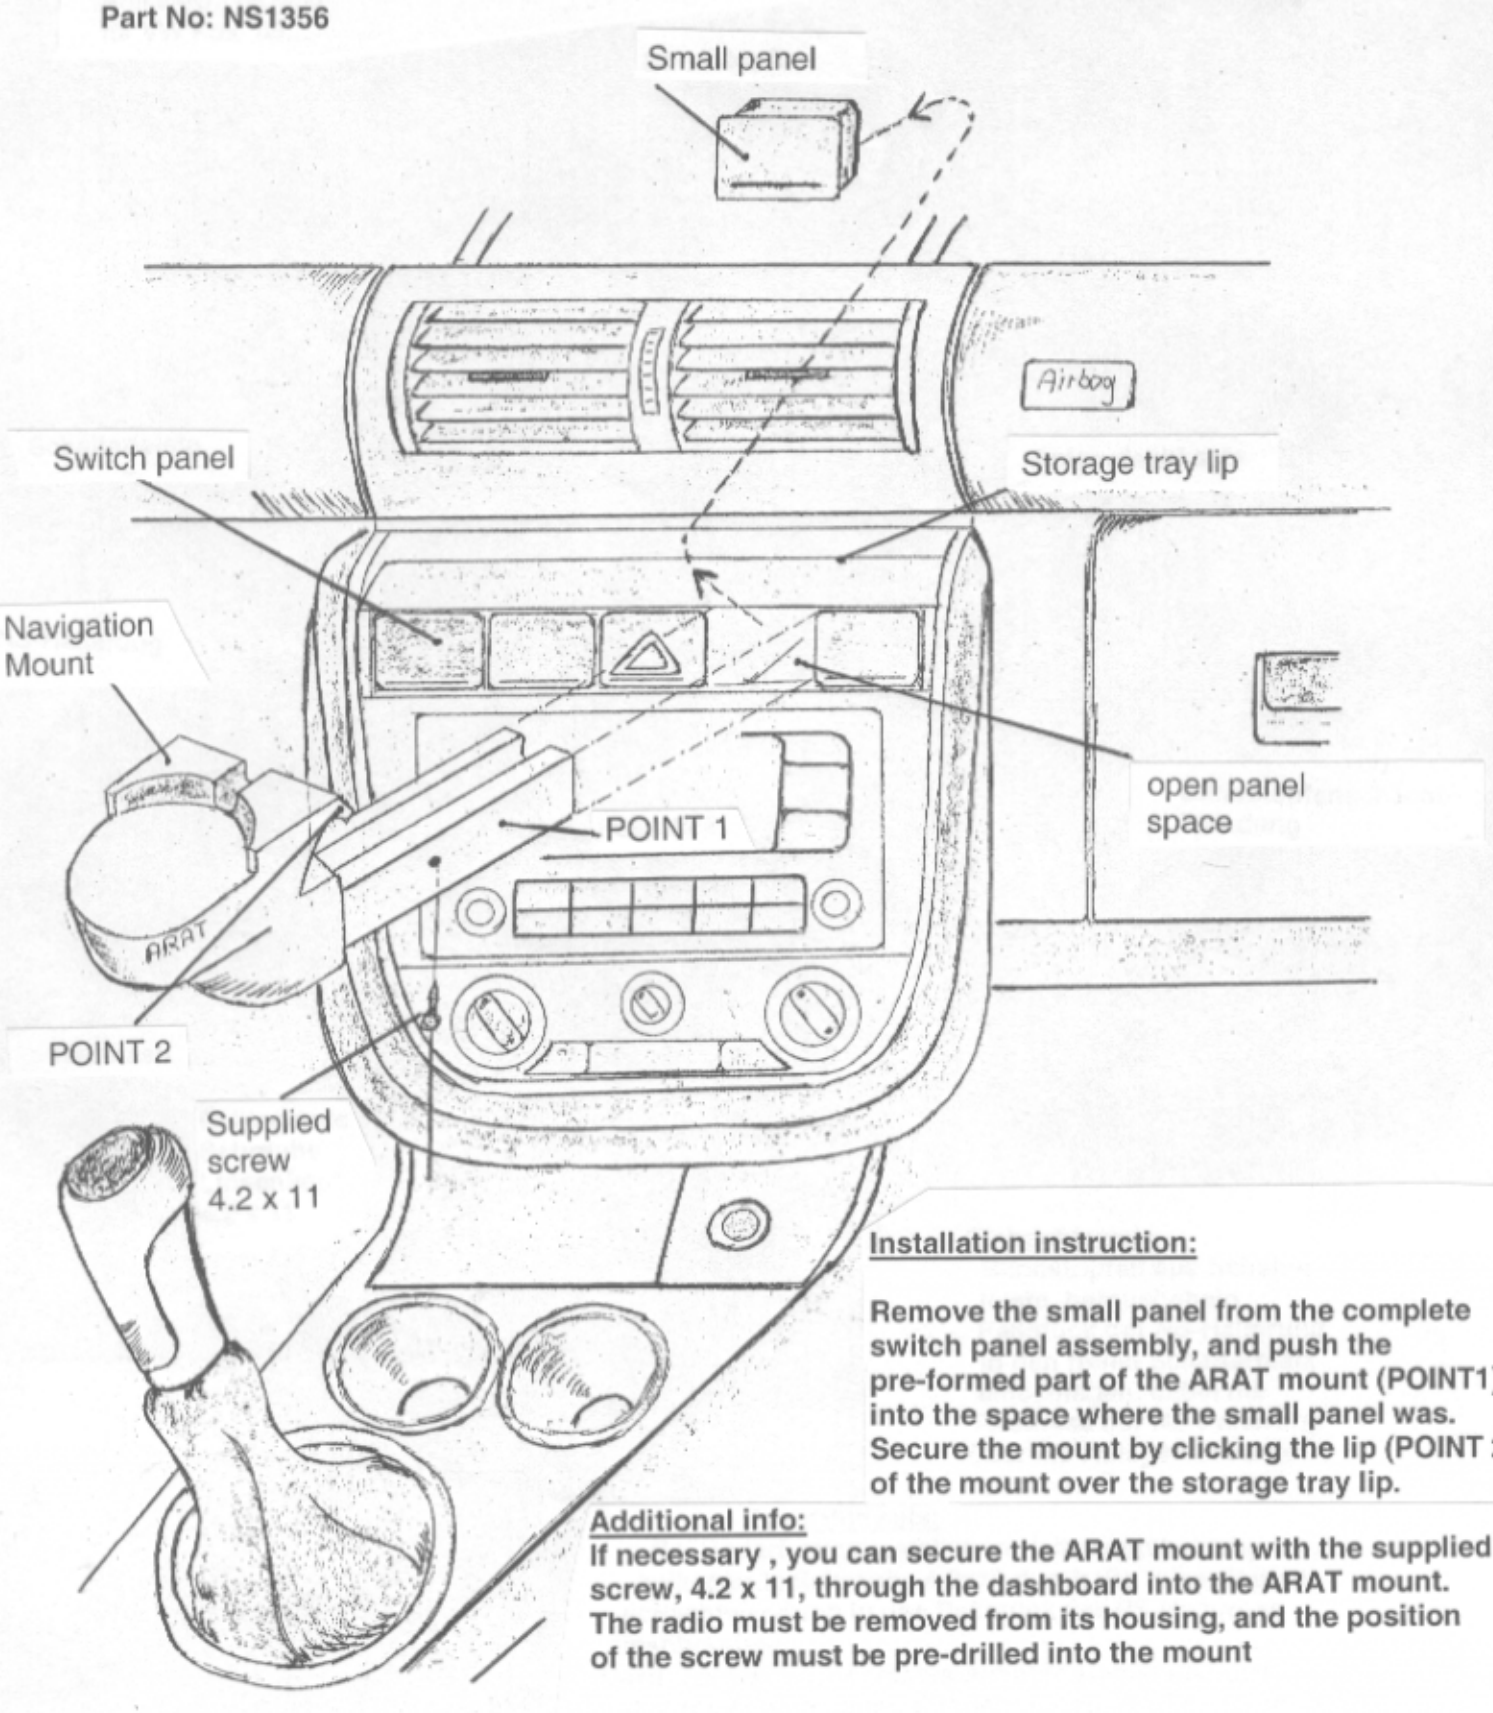

Installation instruction:

Remove the small panel from the complete switch panel assembly, and push the pre-formed part of the ARAT mount (POINT1) into the space where the small panel was. Secure the mount by clicking the lip (POINT 2) of the mount over the storage tray lip.

Additional info:

If necessary , you can secure the ARAT mount with the supplied screw, 4.2 x 11, through the dashboard into the ARAT mount. The radio must be removed from its housing, and the position of the screw must be pre-drilled into the mount

ARAT GmbH - Hauptstraße 75 - 33758 SH-Stukenbrock - Tel.: 05207-8952-52 - Fax: 05207-8952-68
info@arat.de - www.arat.de